


Network Lab – DNS, Routing & Web Server Configuration

This lab demonstrates how a client computer communicates with a web server using DNS name resolution and IP routing.

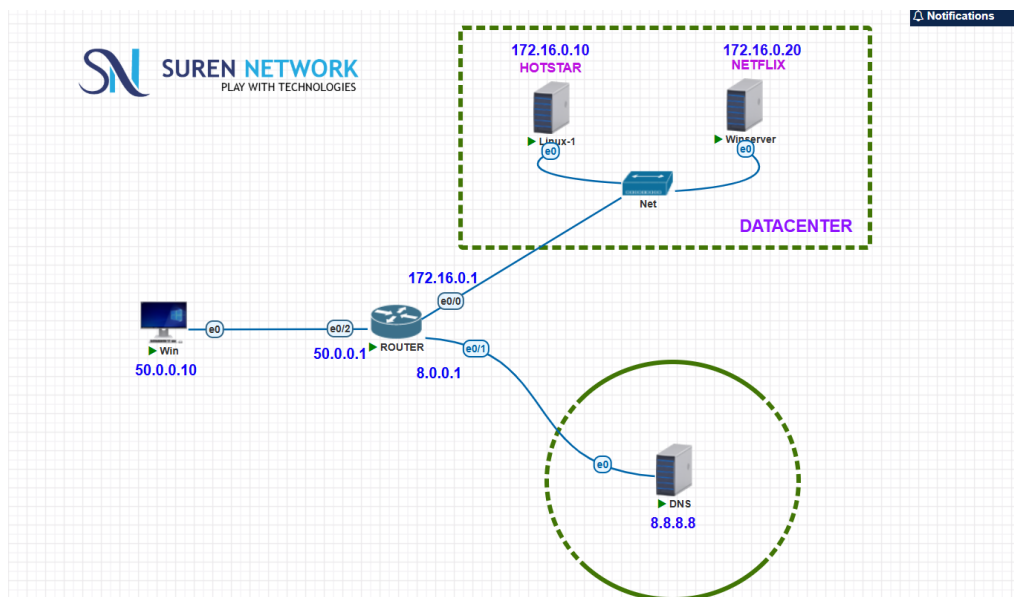

Step 1 : Assign ip address for router interface :

Cmd : **ethernet 0/0**

en

configure terminal

interface eth 0/0

ip address 172.16.0.1 255.255.0.0

no sh **ethernet 0/0**

Ethernet 0/1

interface eth 0/1

ip add 8.0.0.1 255.0.0.0

no sh

Ethernet 0/2

interface eth 0/2


ip add 50.0.0.1 255.0.0.0

no sh

Show ip interface brief

```
Router#show ip interface brief
Interface      IP-Address      OK? Method Status      Protocol
Ethernet0/0     172.16.0.1      YES manual up          up
Ethernet0/1     8.0.0.1         YES manual up          up
Ethernet0/2     50.0.0.1        YES manual up          up
Ethernet0/3     unassigned      YES unset  administratively down down
Router#
```

Step 2 : Assign ip address for client pc:

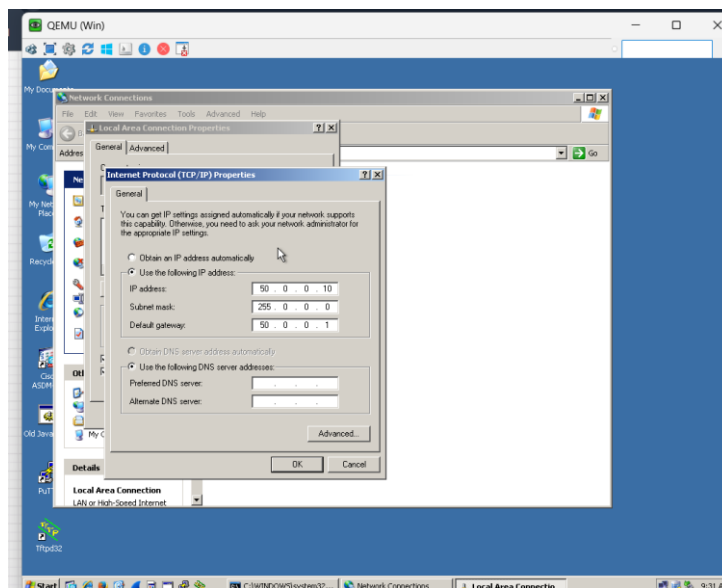


Step 3 : Assign ip address for tty linux server

Username : root Password : password

Edit ifcfg-eth0 file using vi editor vi /etc/sysconfig/network-scripts/ifcfg-eth0

Press i button for insert

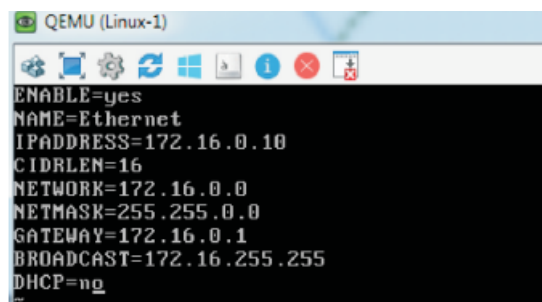

Save this configuration

Esc :wq

Service network restart (To restart nic)

Step 4 : Edit html page using vi editor

vi /home/thttpd/index.html

Step 5 : Assign ip address for windows server


Step 6 : Install IIS service in windows server

Host any file or image if you want


Step 7 : Assign ip in DNS server

Step 8 : Install dns service from server manager


Step 9 : Once installed dns service go to tools and open dns and create record for linux webserver and windows webserver

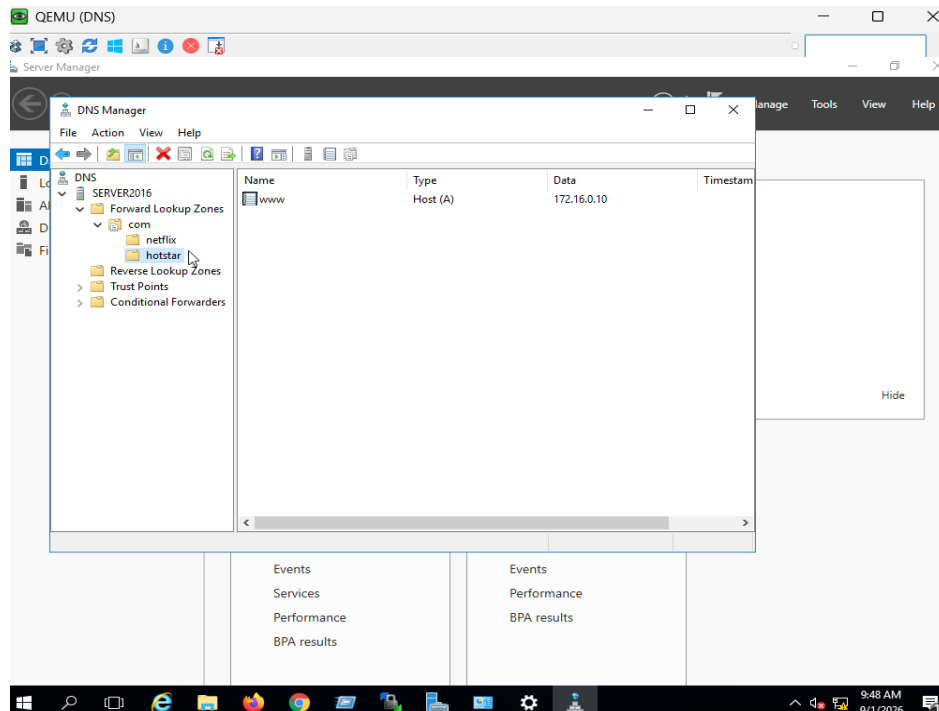

Step 10: Set preferred dns server ip in client device

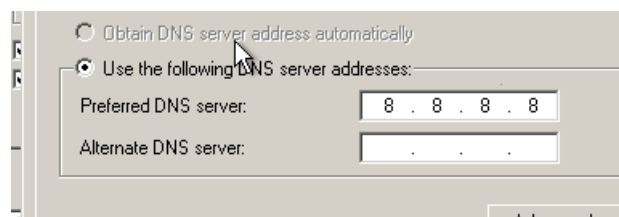

Step 11: Access webserver-1 using domain name

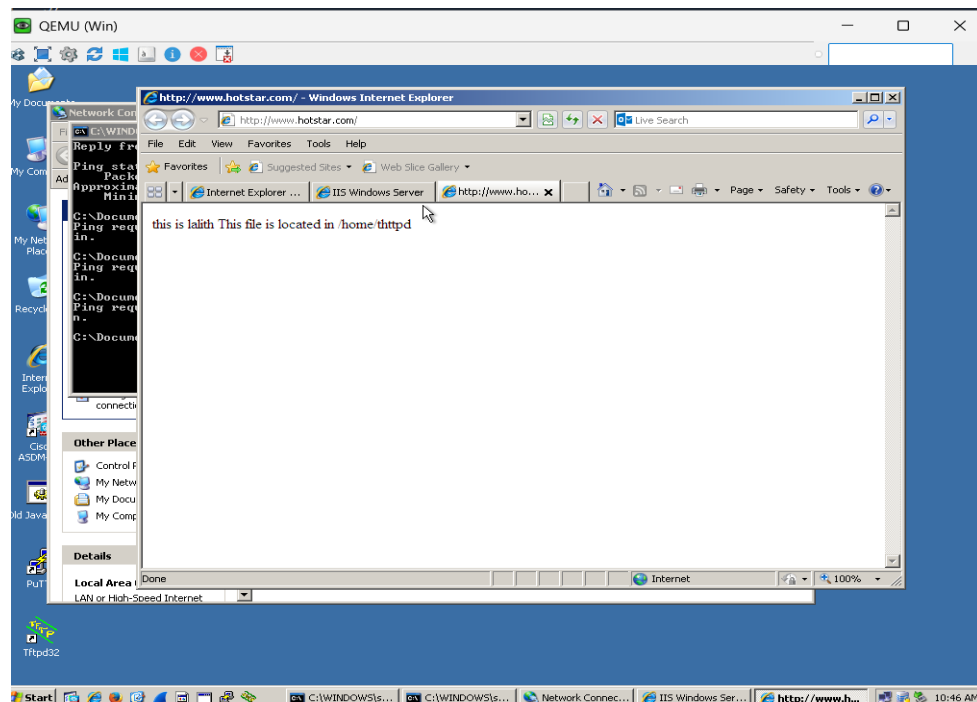

Step 14: Access webserver-2 using domain name

